



# Installing Canon PowerShot S80 LCD Screen

## Tools used in this guide

- [Phillips #00 Screwdriver](#)
- [Spudger](#)



## *Step 1 - disassembly Outer Casing*

- Remove the knot on the wrist lanyard.
- Remove the battery and memory card.






### Step 2


- Remove all screws from sides of outer casing.
- Begin removing the screws on the bottom of the outer casing.
- Remove the rest of the screws from the outer casing.



### Step 3



- Gently pull the front cover off the camera.

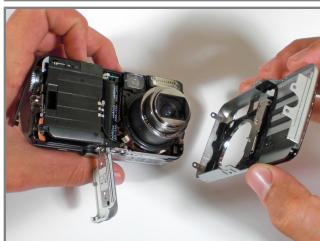

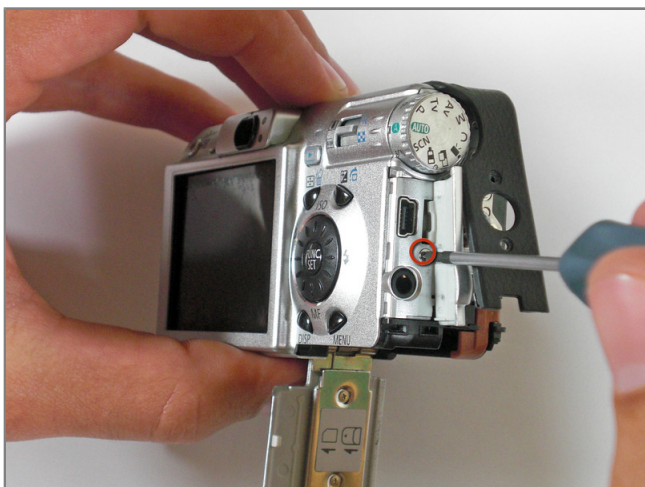

### Step 4


- Open the "A/V Out Digital" cover slide, and remove the screw inside.
- Gently pull off the back casing.
- Remove the black "L" shaped piece of metal.

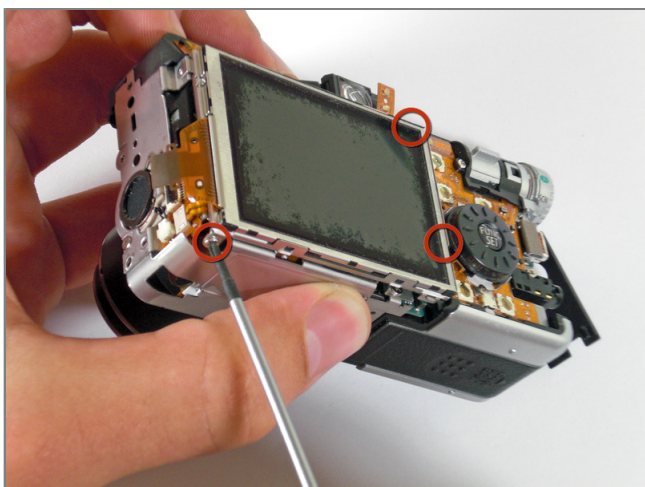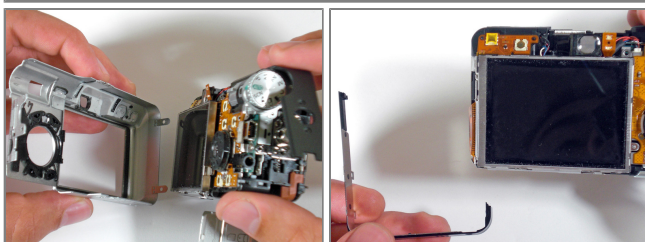

### Step 5 - LCD Screen

- Remove the three screws that are holding the screen in place and free the screen from the underlying components.
- Be careful of the ribbon wire that is still attached on the left of the screen.



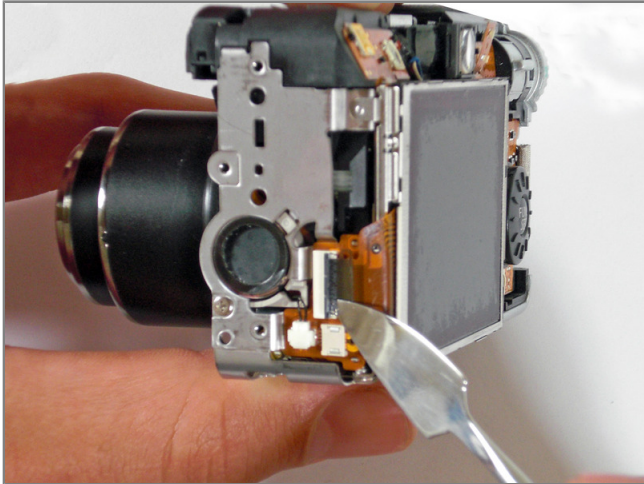

### Step 6

- With the spudger, gently lift the black flap that is holding the wide ribbon cable wire in place.
- Unplug the wide ribbon cable.
- Unplug the narrow ribbon cable to free the LCD screen from the camera body

